





PATRIOT ORDNANCE FACTORY

POF-USA Renegade Rail Removal

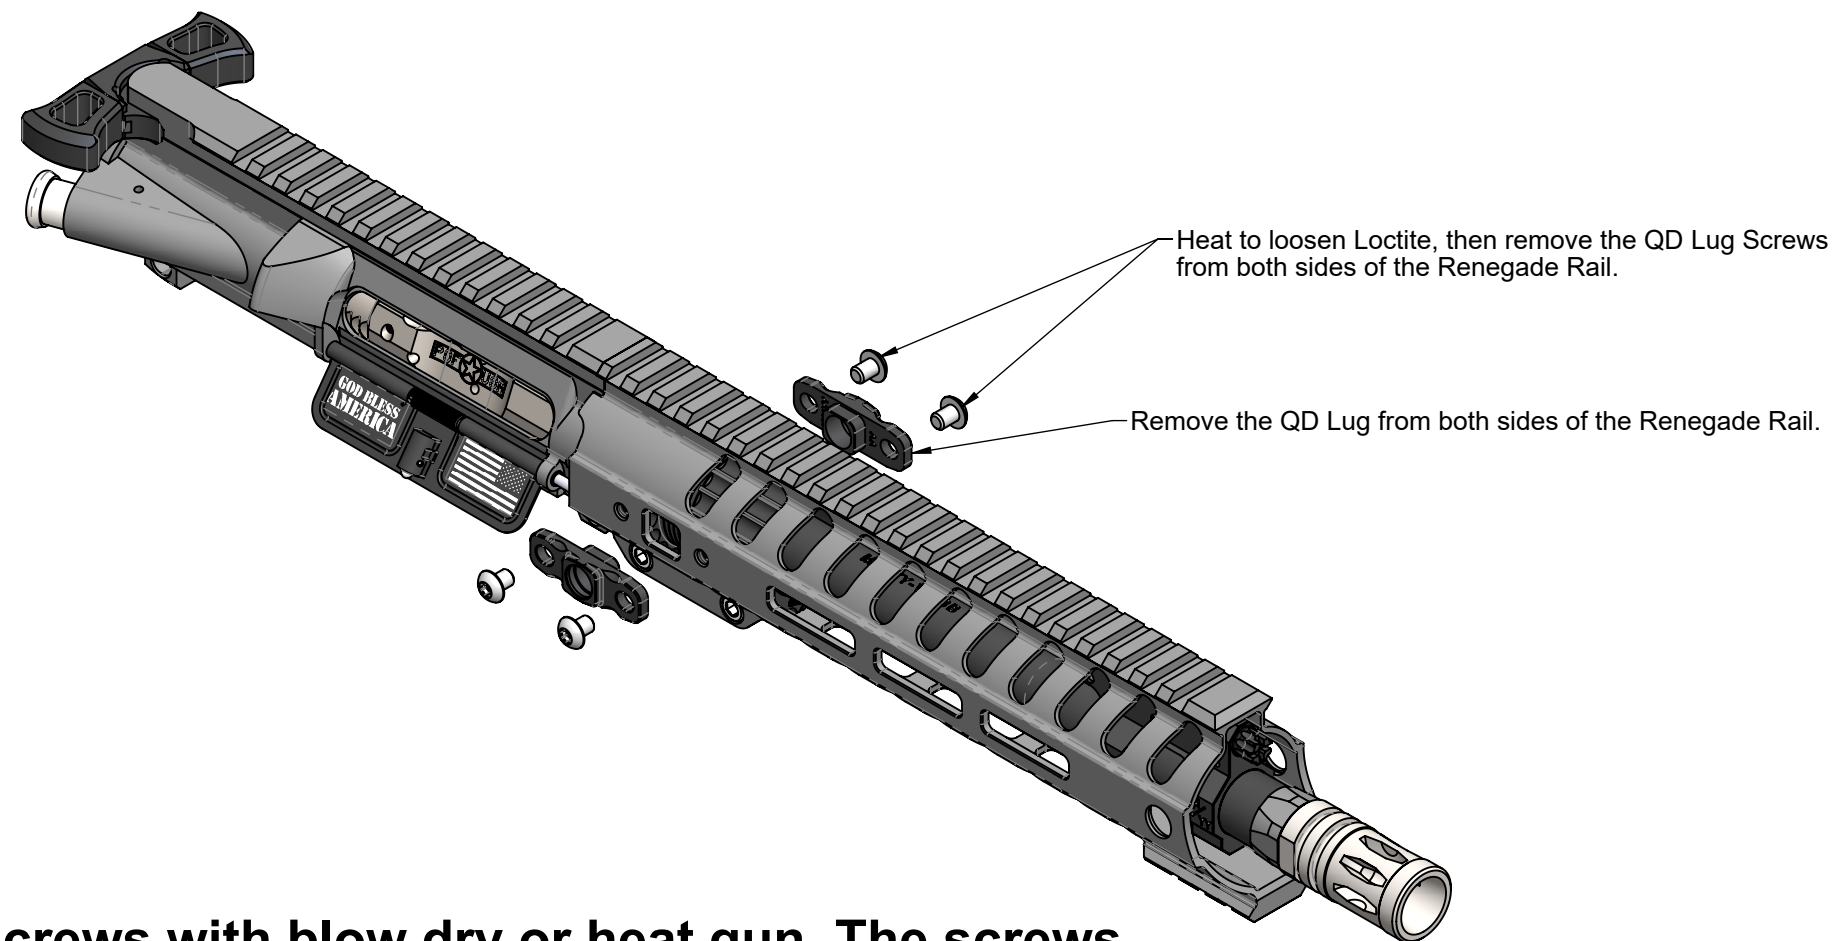


1. Heat up screws with blow dry or heat gun. The screws have loctite on them. Then, Using a IP25 Torx Plus or Torx T25 size driver, completely Remove the 4 total (2 per side) 10-32x1/4 QD Lug Screws, and the 2 QD Lugs they fasten, from each side of the Renegade Rail.

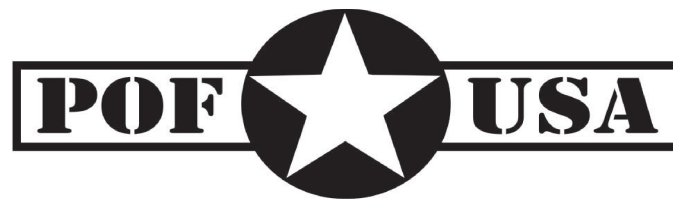

PATRIOT ORDNANCE FACTORY

POF-USA Renegade Rail Removal

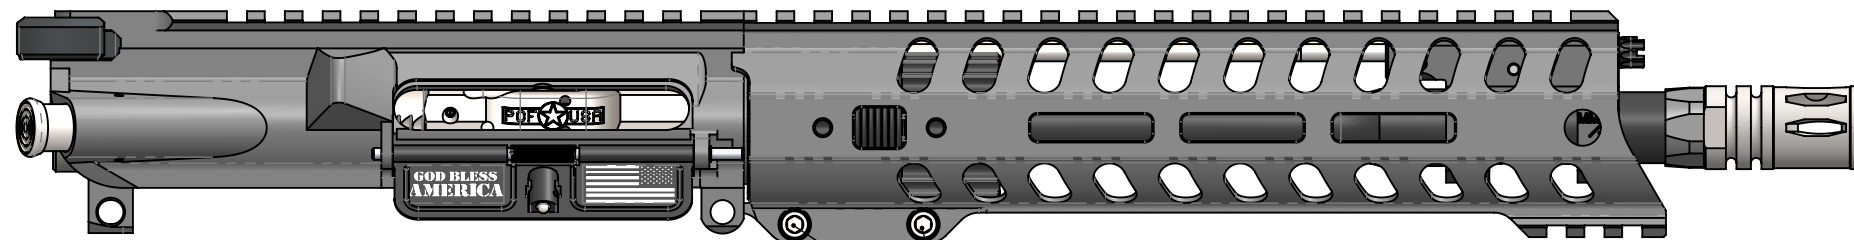

Heat to loosen Loctite, then loosen these Clamp Screws

2. Heat up screws with blow dry or heat gun. The screws have loctite on them.


Using a 5/32 hex driver or hex wrench, loosen the 2 10-32x3/8 Socket Head Cap Screws that clamp the Renegade Rail to the Heat Sink Barrel Nut.

***The screws do not need to be removed! They can just be loosened enough to allow the rail to slide off in a future step!**



PATRIOT ORDNANCE FACTORY

POF-USA Renegade Rail Removal

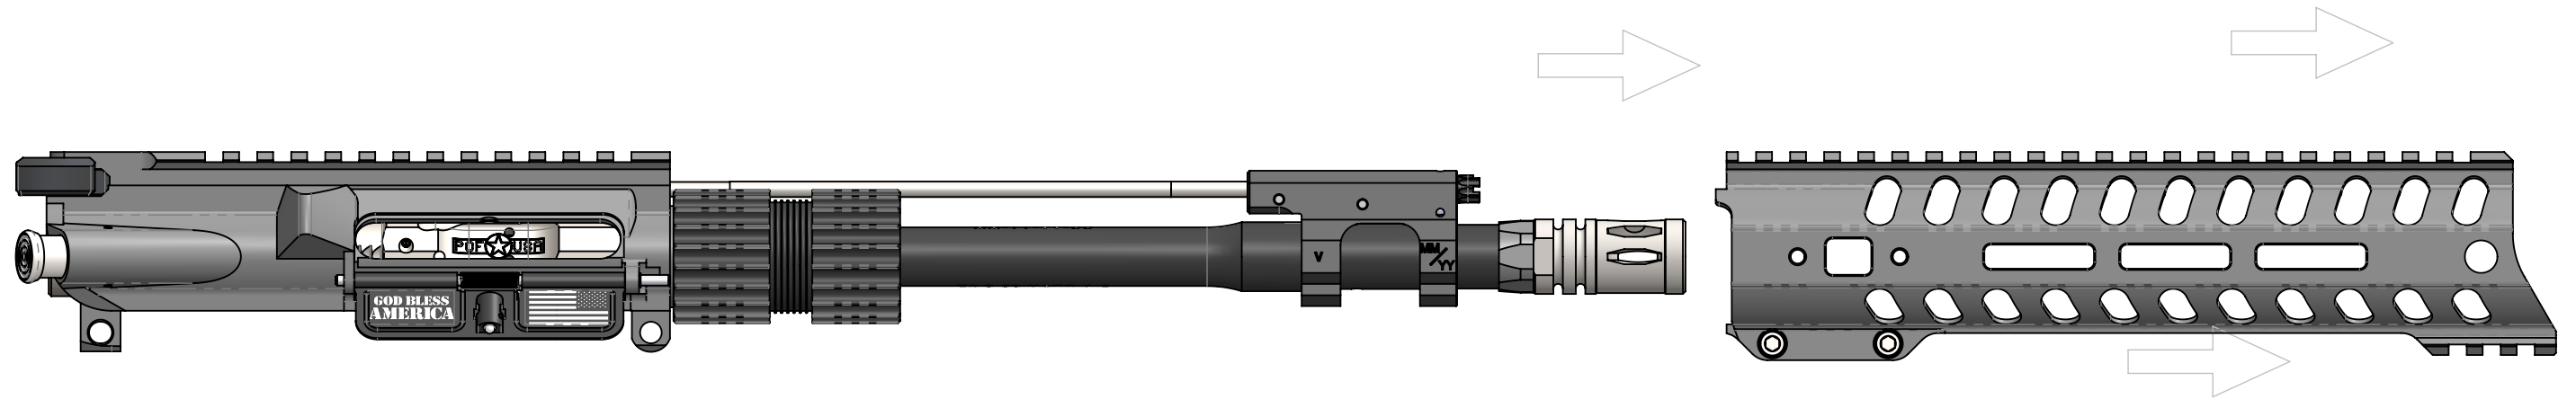

3. Slide the Renegade Rail forward and remove it!